



1

Insert the sidestick into the base

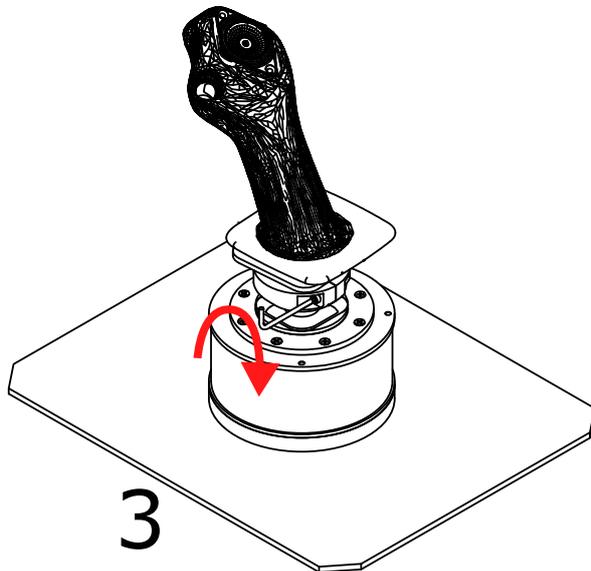

3

Screw the M3 HEX screws with the 2.5mm HEX wrench

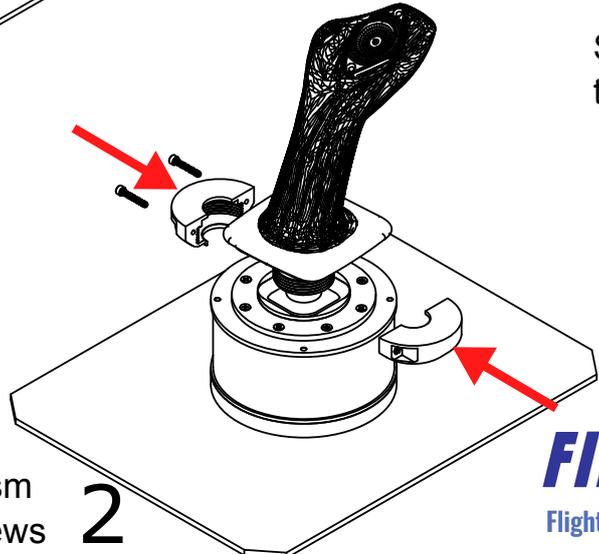

2

Insert the fixing mechanism and the two M3 HEX screws